




CHARACTERISTICS

- 7 days programming
- 2 Channels A and B
- 9 Built-in programs
- 1 user program per channel
- Program graphic display
- Automatic or Manual operation
- Keypad lock function (child safety)
- Hours and parameters are saved in case of power cut.

DISPLAY

- 1 : Operating mode menu
- 2 : Days of the week
- 3 : Time
- 4 : Program graphic
- 5 : Channel A or B

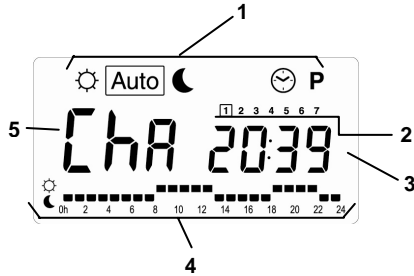

MODES DESCRIPTION

Use the keys **←** & **→** in order to change the mode in the operating mode menu.

Set CLOCK Menu

Use this menu to adjust the Timer clock to the actual time.

Use **+**/**-** to adjust the minutes **08:23** Press **OK/I**

Use **+**/**-** to adjust the hours **08:23** Press **OK/I**

Them use **+**/**-** to **1 2 3 4** adjust the day **7 0** Press **OK/I**

Auto **AUTOMATIC operating mode**

The Timer follows automatically the selected program according to the actual time.

IMPORTANT:

In order to control **Auto**, **☾**, **☀** your thermostats with the **TIMER**, please put your thermostat in **🕒** position.

☾ Manual REDUCED operating mode

Force reduced temperature operation indefinitely on the 2 Channel.


☀ Manual COMFORT operating mode

Force comfort temperature operation indefinitely on the 2 Channels.

P PROGRAM menu :

By pressing **+** or **-** keys select the channel **ChA** or **ChB** to program, then validate with **OK/I**.

Shows the daily program

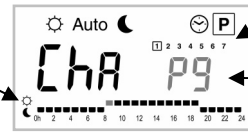

Use **←** & **→** to see the other days in the program

Then press **+** or **-** to change the program

If you select a built-in program **P1** to **P9** and press **OK/I** this program will be followed in **Auto** mode.

Built-in programs description

- P1:** Morning, Evening & Week-end
- P2:** Morning, Midday, Evening & Week-end
- P3:** Day & Week-end
- P4:** Evening & Week-end
- P5:** Morning, Evening (bathroom)
- P6:** Morning, Afternoon & Week-end
- P7:** 7h - 19h (Office)
- P8:** 8h - 19h Saturday (Shop)
- P9:** Week-end (Secondary House)

You can also select a user program **U1** for the Channel **A** and **U2** for the Channel **B**.

USER PROGRAM EDITION

The **+** key sets **☀** temperature at the current blinking program hour

The **-** key sets **☾** temperature at the current blinking program hour

Use **←** & **→** keys to slide the blinking cursor position in the day and modify or correct easily the program.

When the displayed day is correct press **OK/I** to save it and then you jump to the following day. When you press **OK/I** on day 7 you return to the top menu

Now once automatic operating mode **Auto** is selected, the Timer will follow for the Channels **A** and **B** the desired programs.

SPECIAL FUNCTIONS

KEYPAD LOCK Function :


Function to prevent any modifications or changes of the parameters.

In **☀**, **Auto**, **☾** operating modes you should maintain the **OK/I** key pressed and press simultaneously on the **+** or **-** key to lock (**Lac cod E**) or unlock (**Un Lac**) the keypad.

TECHNICAL CHARACTERISTICS

Operating voltage	230VAC +- 10%
Operating temperature	0 - 50 °C (oder 32 - 122 °F)
Electrical protection	IP30

DIMENSIONS

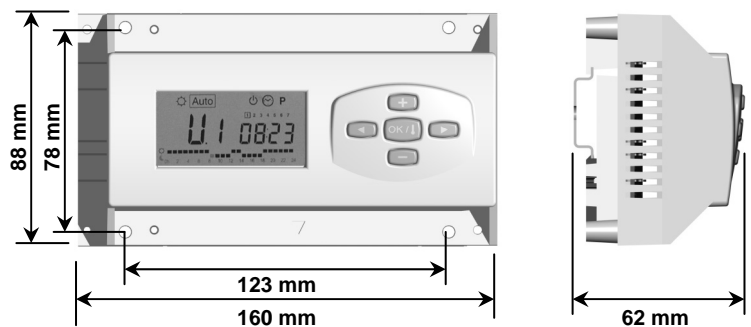

MASTER 6 ZONES or 4 ZONES

TIMER

